



Hand Controller




- A - Left Bumper**
- B - Right Bumper**
- C - Back Button**
- D - Start Button**
- E - Left Joystick**
- F - Right Joystick**



WISP r
SYSTEMS

Press and hold RB (right bumper) and LB (left bumper) to arm UAV




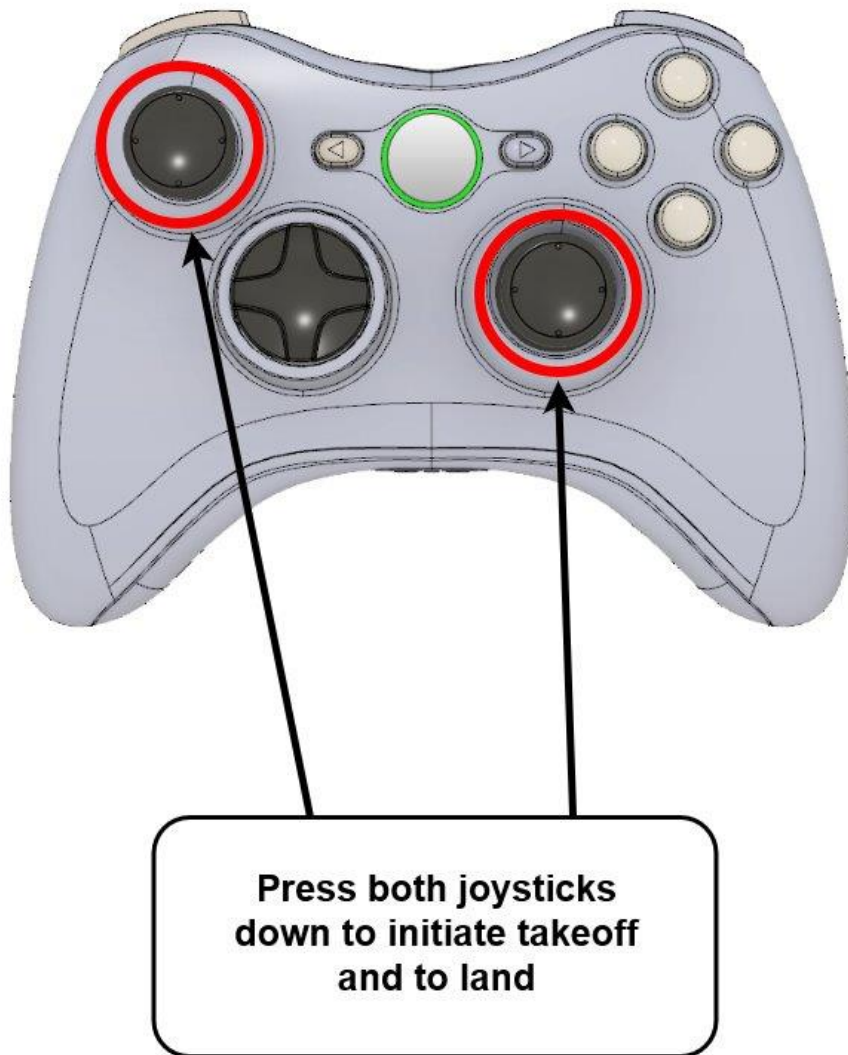





**Left Joystick
Move UAV Left
& Right**

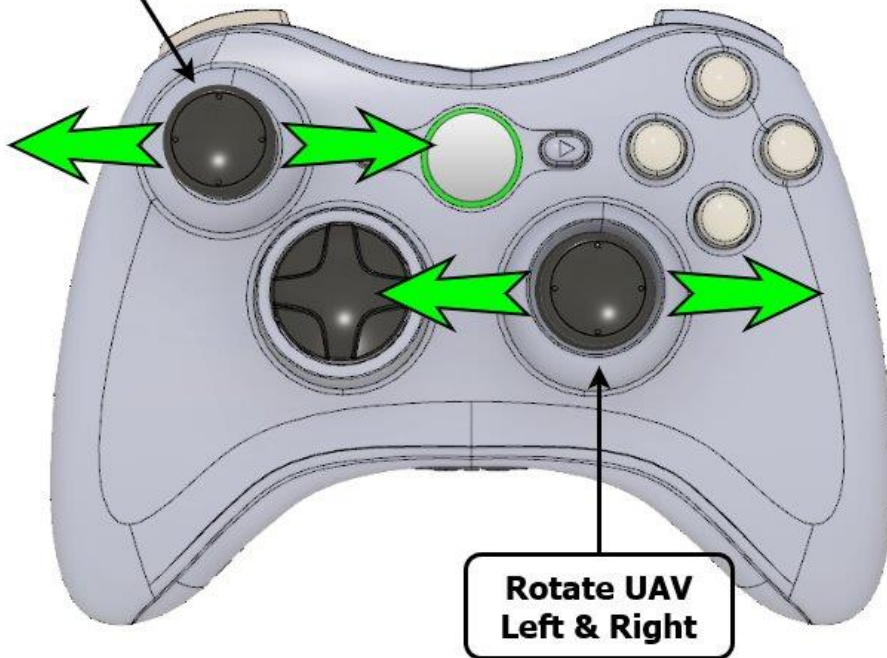

**Rotate UAV
Left & Right**



**Move UAV
Backwards &
Forwards**



**Move UAV Up
& Down**